



The Schematic/Connection Drawing shows the position of the relay contacts when the Power System is in its alarm mode of operation (relay coils are then de-energized). The relay outputs are preprogrammed from factory (Factory Settings).

Date	Design	Draw	Approved	Scale	ELTEK
28.11.2013	MIRRATSK	MIRRATSK	IFS	-	always on
SD - FPS 24V 3kW 3x230VAC BULK					
Sym.	Alternation	Date/Sign	Format	Page	Drawing no. Rev.
			A3	1 of 1	2169361 1